 
 


MEDIACLASSROOM QUICK REFERENCE CARD

ONETOUCH™ LIVE: INITIATE A SESSION

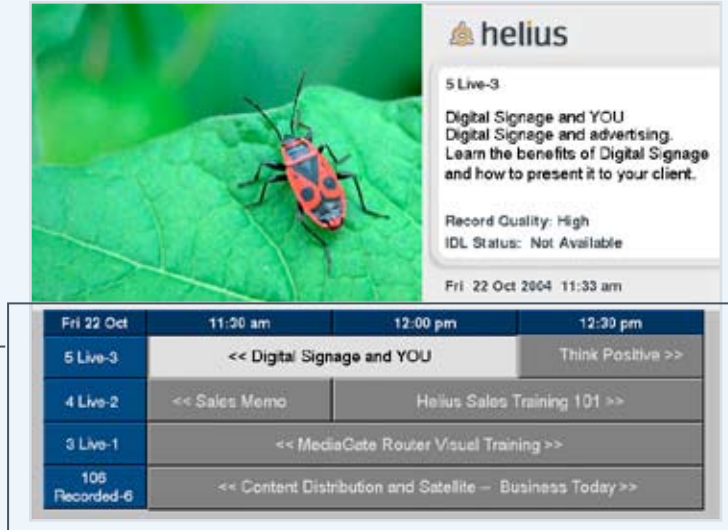

Electronic Program Guide (EPG)

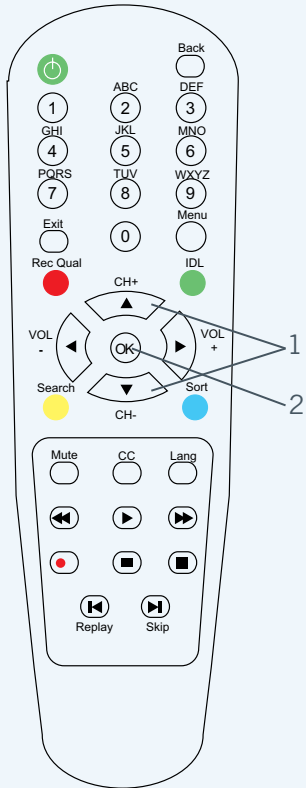


1. Select the live program from the EPG using the ▲ ▼ arrow keys.*
2. Press OK to make selection.
Login to a host will occur automatically after 15 seconds.
Keypads will initialize.
3. Enter participant(s) ID into keypad(s).

*Please refer to the user manual for more information on how to display the EPG.

USING THE KEYPAD

The LCD display will contain messages, questions or options for multiple choice selections.

When answer selections display in the LCD, press the function key below the answer to make your selection.

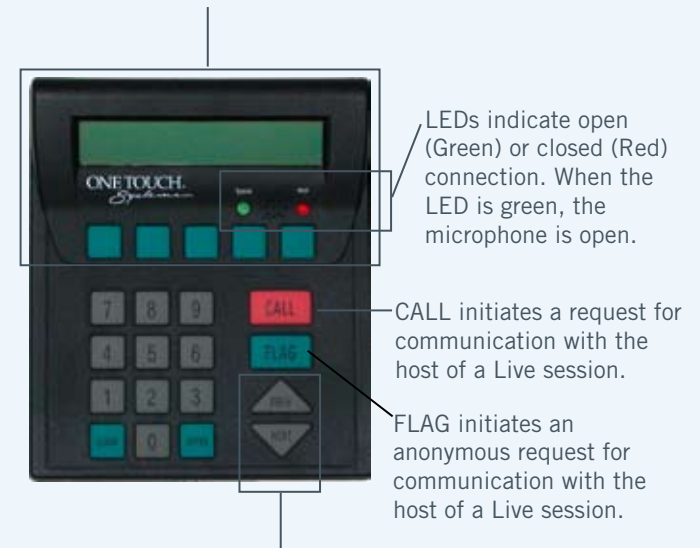


PREV and NEXT are used to scroll through available questions on a Live session quiz.

Once all questions have been answered to your satisfaction, press ENTER to accept and record your answers.


When CALL or FLAG is pressed, wait until the green LED is lit to begin speaking.

 ONETOUCH™ ONDEMAND: INITIATE A SESSION

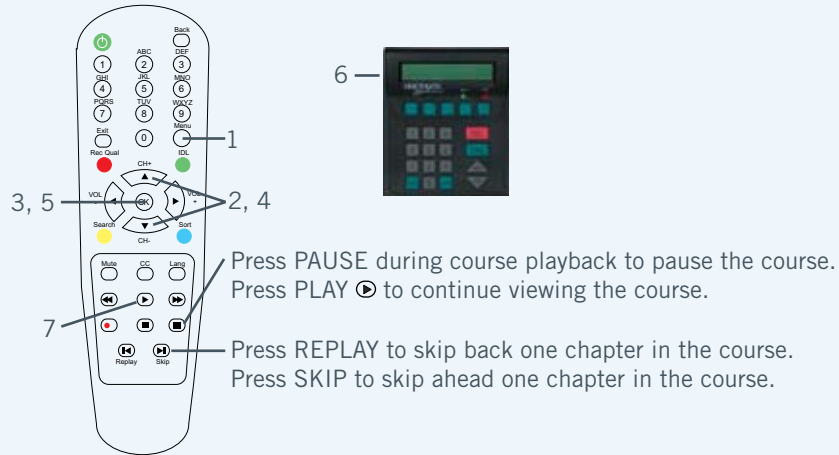

Pressing STOP while viewing a course will immediately end the course and re-display the OnDemand Program Guide.


1. Press MENU to open the Main Menu.

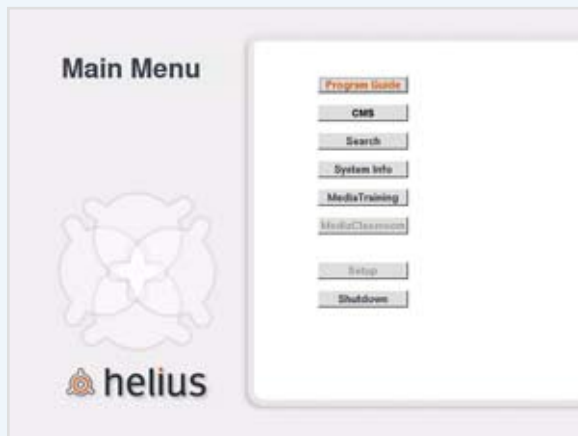

2. Press the down ▼ arrow on the remote control to highlight CMS.
3. Press OK to enter the Content Menu System (CMS). CMS contains a list of available recorded video on the Router including OnDemand sessions.



4. Press the up ▲ or down ▼ arrows on the remote control to highlight a selection. The Q icon next to the course identifies it as an On-Demand course.
5. Press OK.

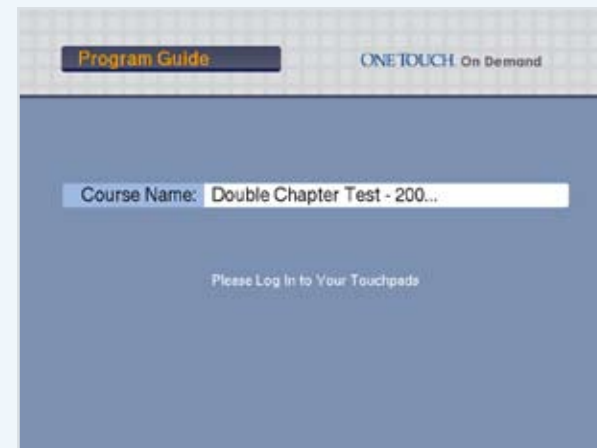

6. When prompted on the keypad display, enter individual participant login number(s) on the OneTouch keypad(s).
7. Press PLAY ▶ on the remote control when all participants are logged in to begin program playback.